



Termination Instructions

①




Strip off 1.6 inch of cable jacket.
Fold back the drain wire.

②

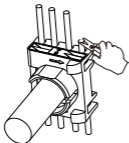

Insert a cable into the termination cap
and fan out all four twisted pairs.
Following the instruction of the color-
coded wire position printed on the
termination cap, position conductors
into the slots and make sure the
conductors are in the proper slot.
Trim the ends of the conductors


③

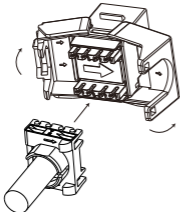

Install the termination cap to outlet,
which will also allocate the conductors
sitting on the slots.

JACK PIN DESIGNATIONS	TIA / EIA T568A	TIA / EIA T568B
	1	White/Green
2	Green	Orange
3	White/Orange	White/Green
6	Orange	Green
4	Blue	Blue
5	White/Blue	White/Blue
7	White/Brown	White/Brown
8	Brown	Brown

④

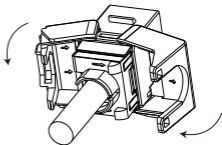

Secure the hinged outlet by using
a crimp tool until it completely
snaps to effect the connection.

⑤

